


X homing offset



[JellyBox HowTo: X Homing Offset](#)

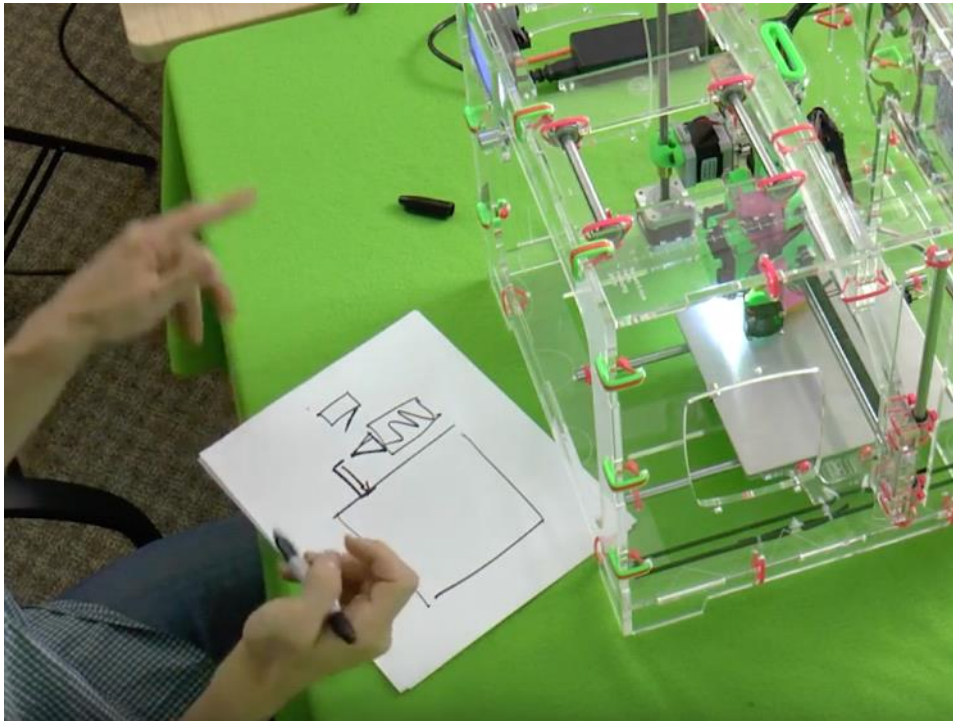


Title: Set the X Homing Offset



The X Homing offset tells the printer where the print area (build plate) effectively starts as the "home position" for x – the place at which X carriage hits the X endstop – puts the nozzle off the build plate.
! If the offset isn't set, under some conditions, the proximity sensor may cause problems trying to sense off the edge of the plate.

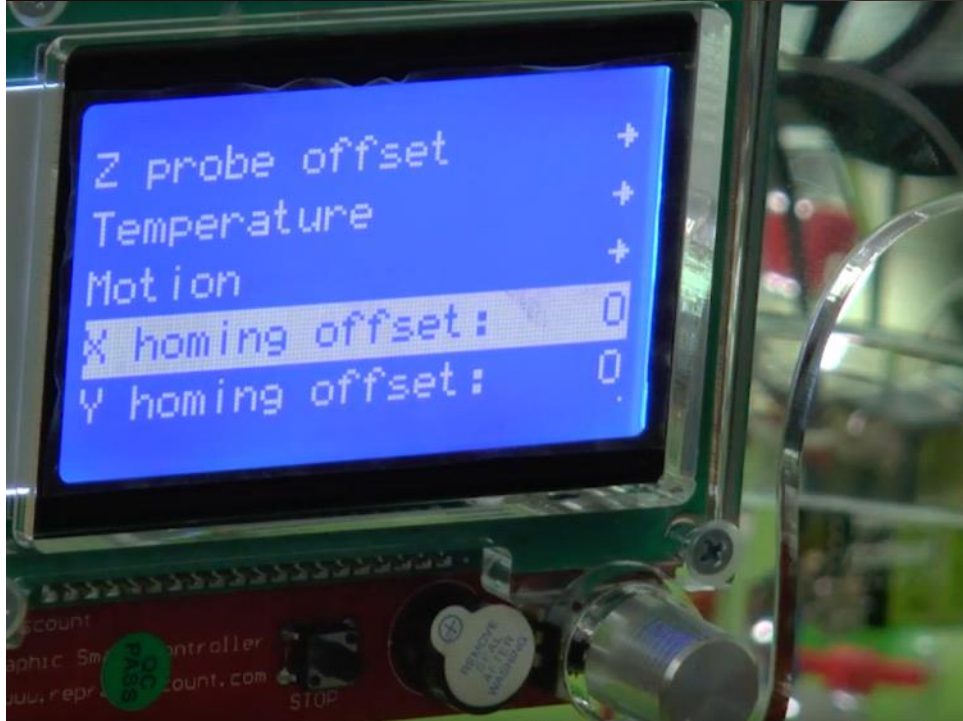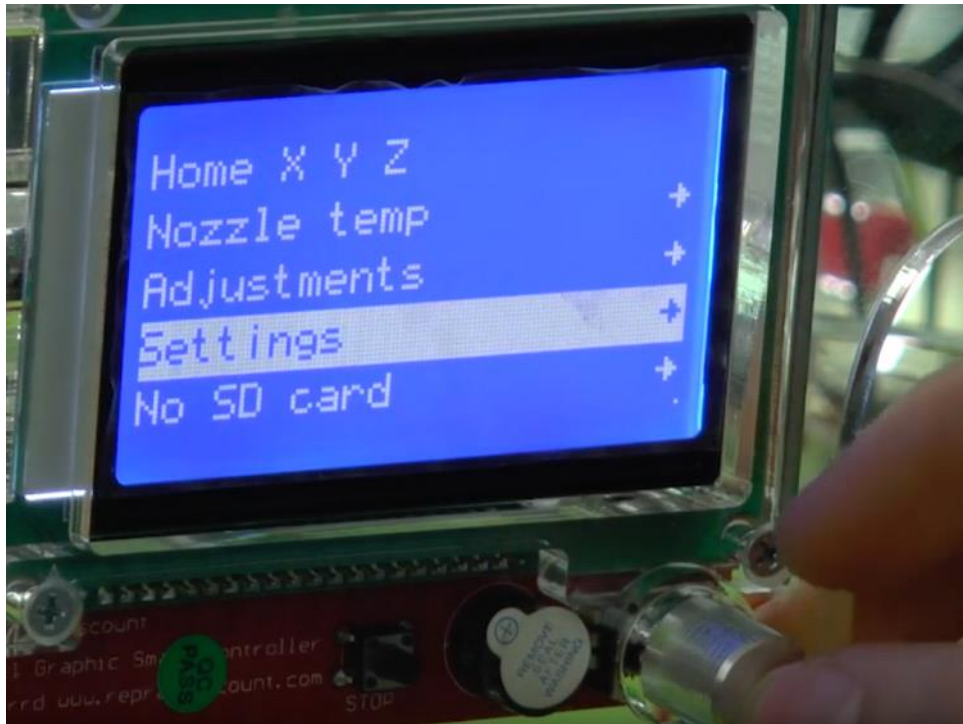

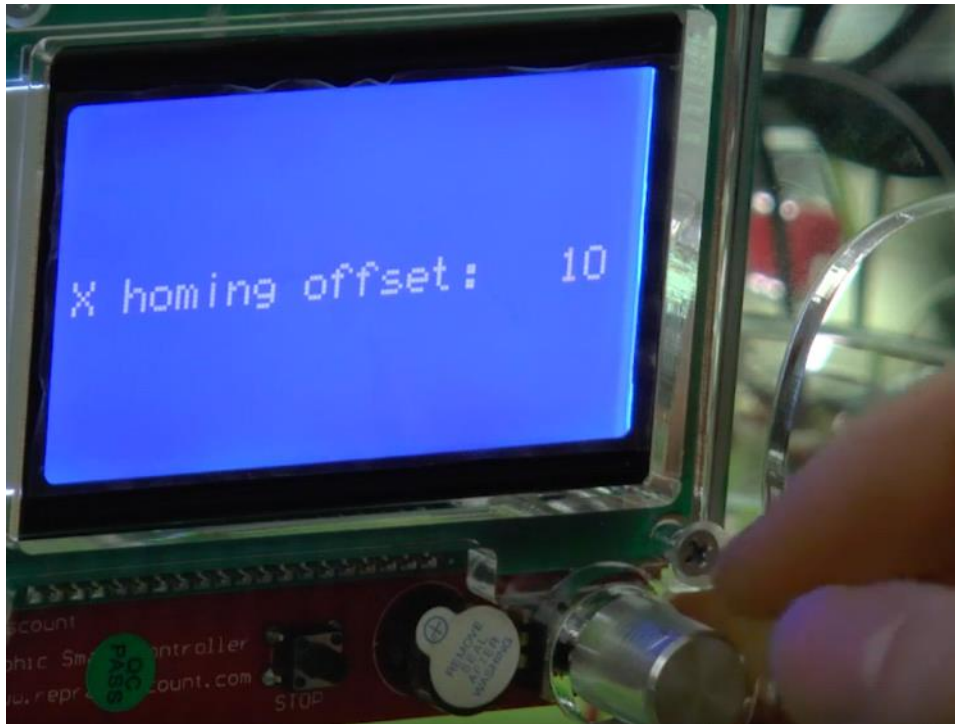

The X homing offset can be found in the "Settings" menu.
Set it to "10", for "10mm".
The Y homing offset is fine at "0".