
#join Brace

JellyBox Build: 20 Acrylic Brace

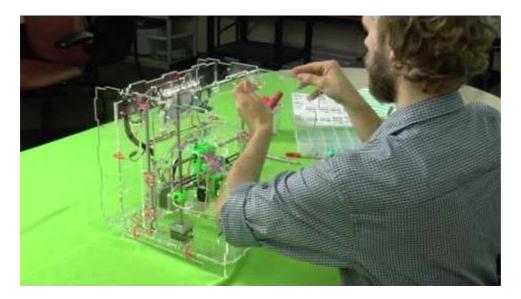

In this video, we assemble and incorporate the Brace.

You'll Need:



Front Brace piece
Back Brace piece
4" zip tie (1)
6" zip tie (2)
A soft cloth
Vice grips


Title: Clean the Brace



Use a soft cloth to clean the brace parts.


Any fingerprints or dirt stuck between the two will show.



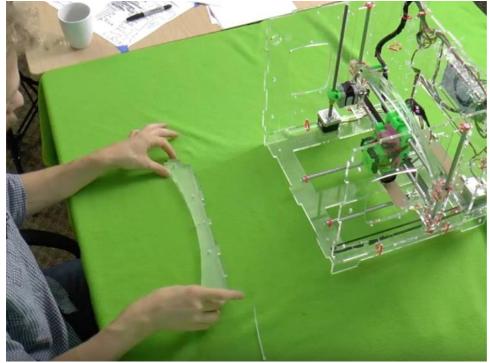

Place the front brace on top of the back brace.


Title: Connect the Brace Pieces

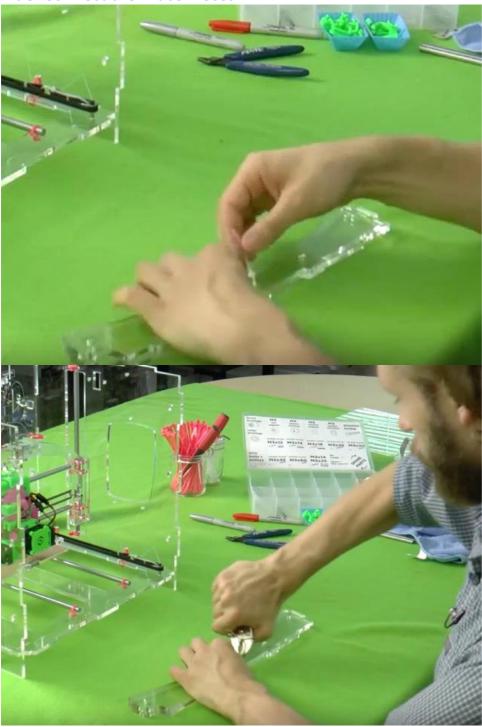



Use a 4" zip tie through the two central holes. Tighten the zip tie with vice grips. Cut the free end with side cutters.


Title: Place the Brace in the Printer

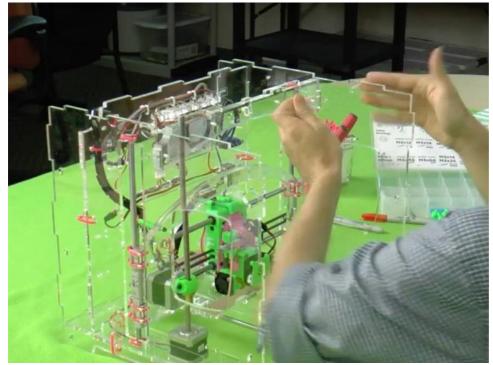

Gently flex left and the right acrylic pieces to put the brace into position. (See video if necessary!)

Make sure the cut out in the brace is on the left side.

Title: Secure the Brace with Zip Ties

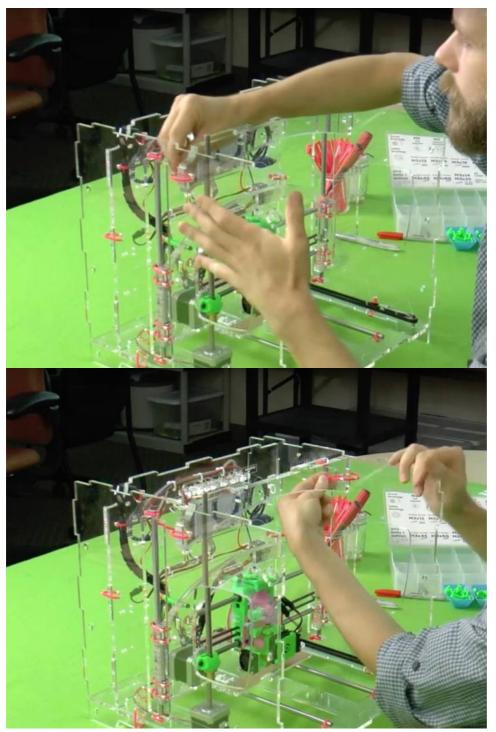

Use two 6" zip ties to hold the brace in place.
Place the heads of the ties behind the brace.
Use vice grips and side cutters to tighten and clean up the connection.